




# Sharp Aquos LC13B2UA Buttons Replacement

Written By: Robert Hobson



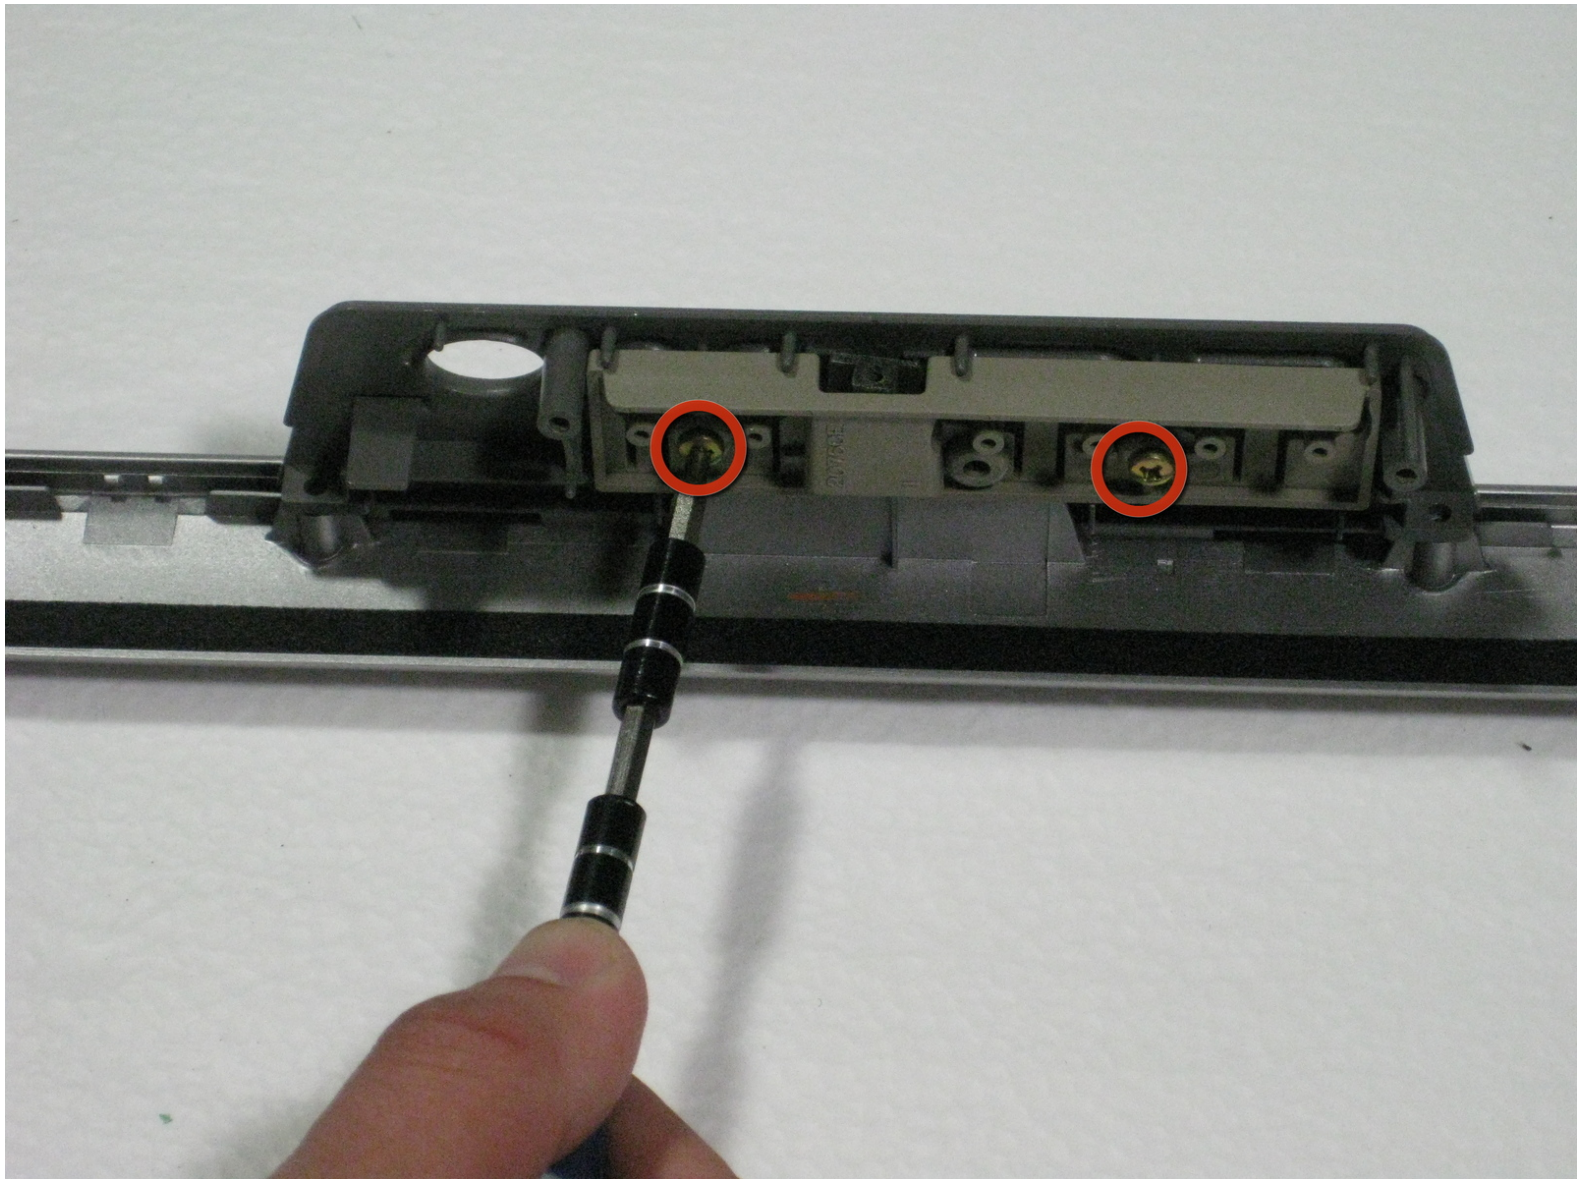

## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-



## Step 1 — Stand



- Place the TV face down on a flat smooth surface as to not scratch the screen.
- Remove the four 8mm screws attaching the stand to the TV.

## Step 2




- Lift the stand off the television.

### Step 3 — Back Case



- Remove the two back panels to display the audio and video inputs..

### Step 4

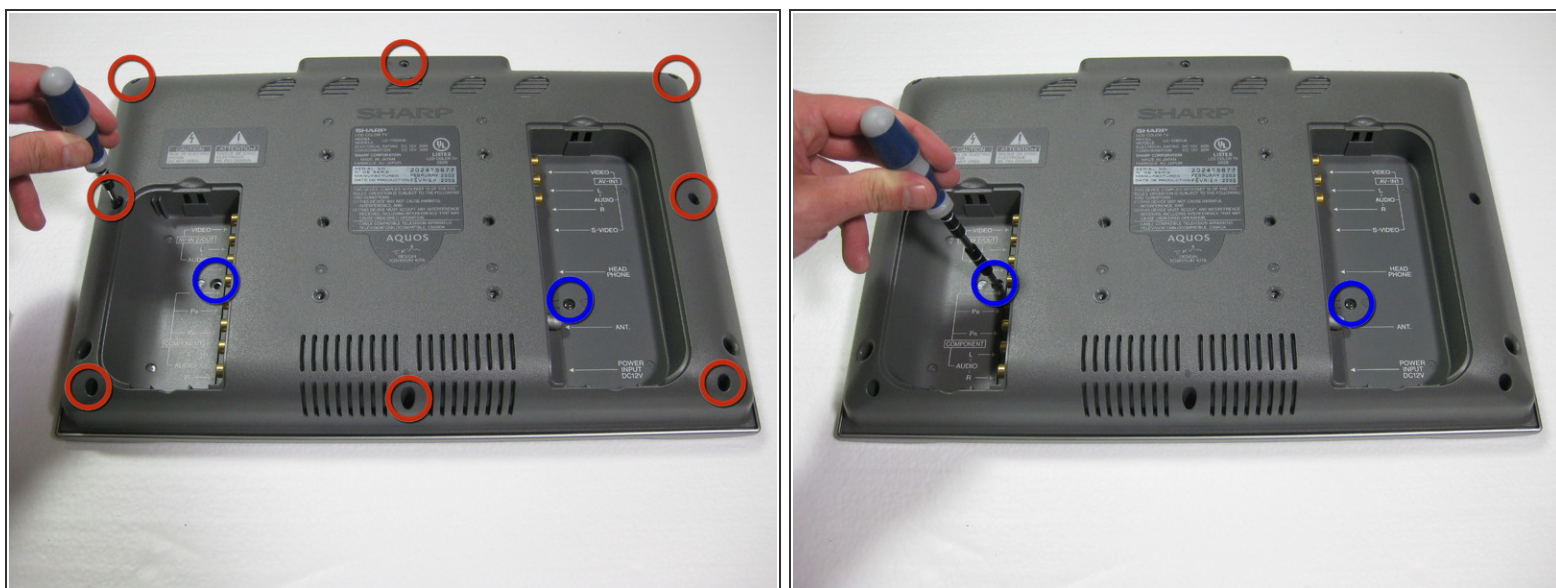

- Remove the eight 6mm Phillips screws around the edge.
- Remove the two 6mm Phillips near the inputs.






## Step 5



- Lift and remove the back case of the television.

## Step 6 — Motherboard

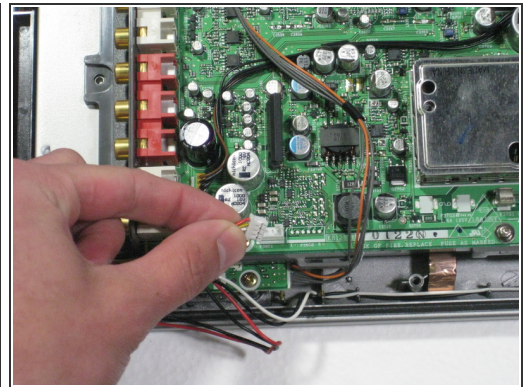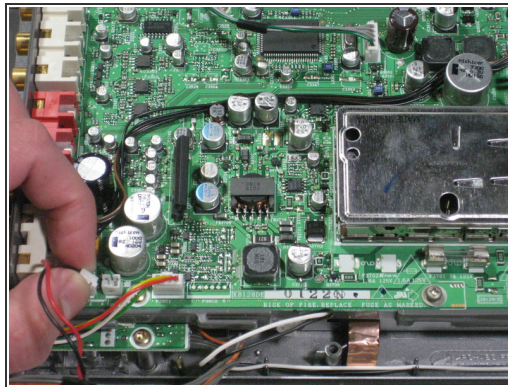
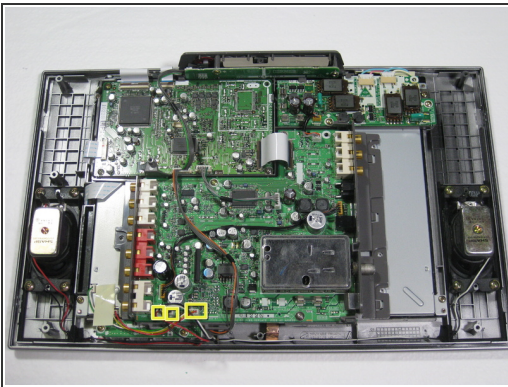


- Remove the two speaker cables and the connector from the circuit board by pinching the plastic connectors and firmly pulling up.

⚠ Pull on the plastic part of the connector, even though it may seem easiest to pull on the wires.





## Step 7

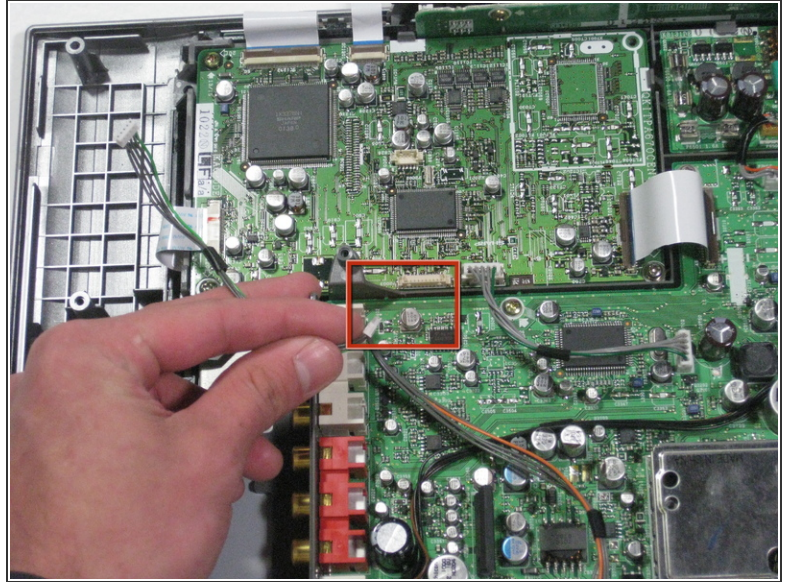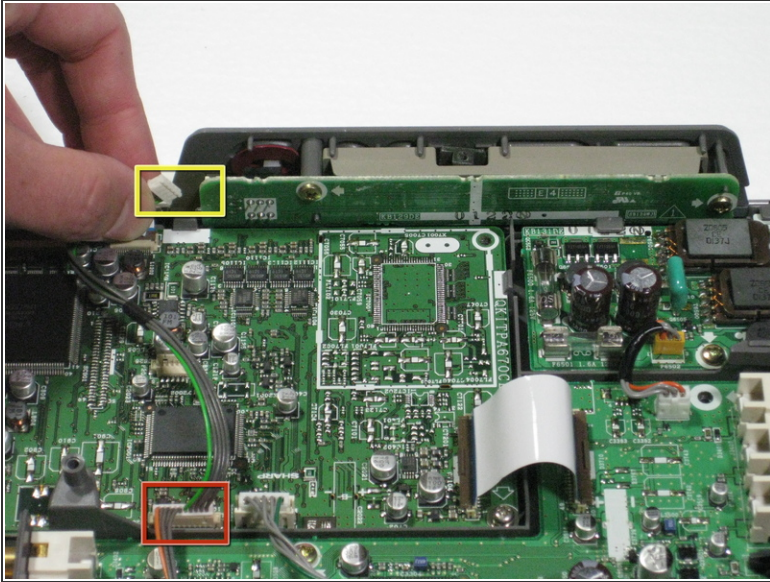

- Remove the green and gray power connector from the side of the buttons panel at the top of the television.
- Remove the green/gray to orange/gray connector from the center of the circuit board.


## Step 8

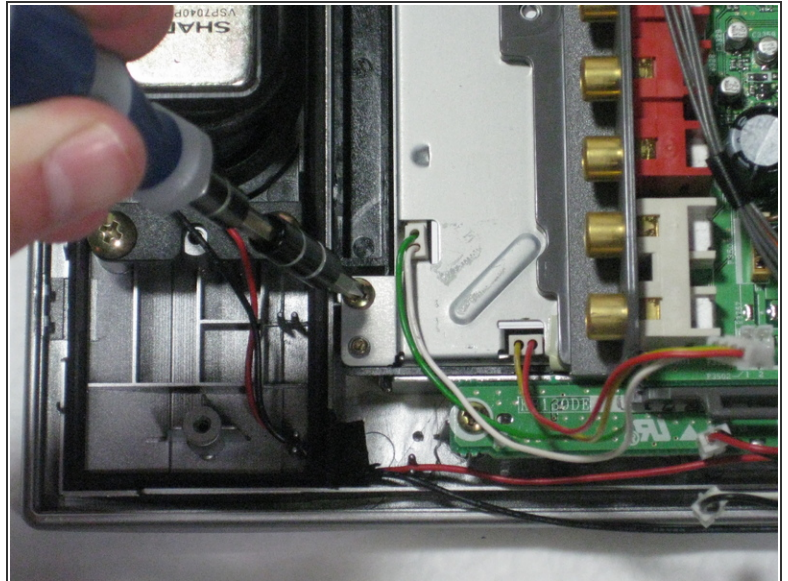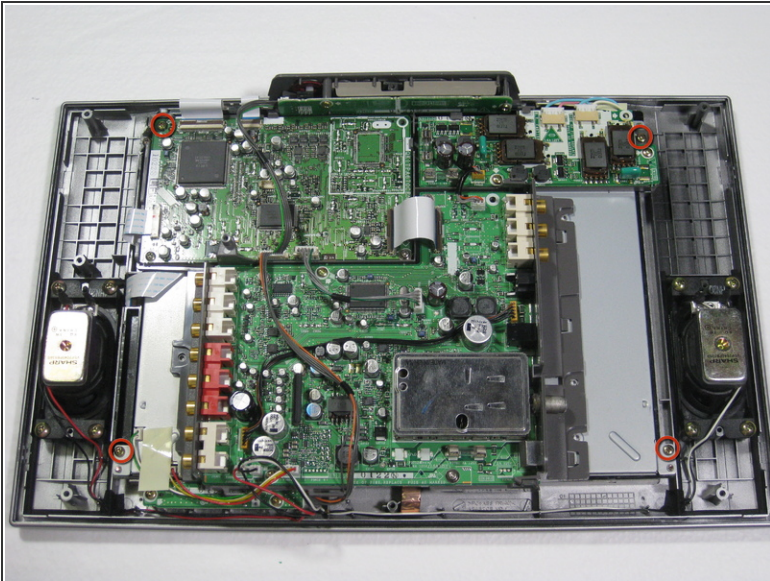

- Remove the four 5mm Phillips screws attaching the LCD and circuit board to the front case.





## Step 9

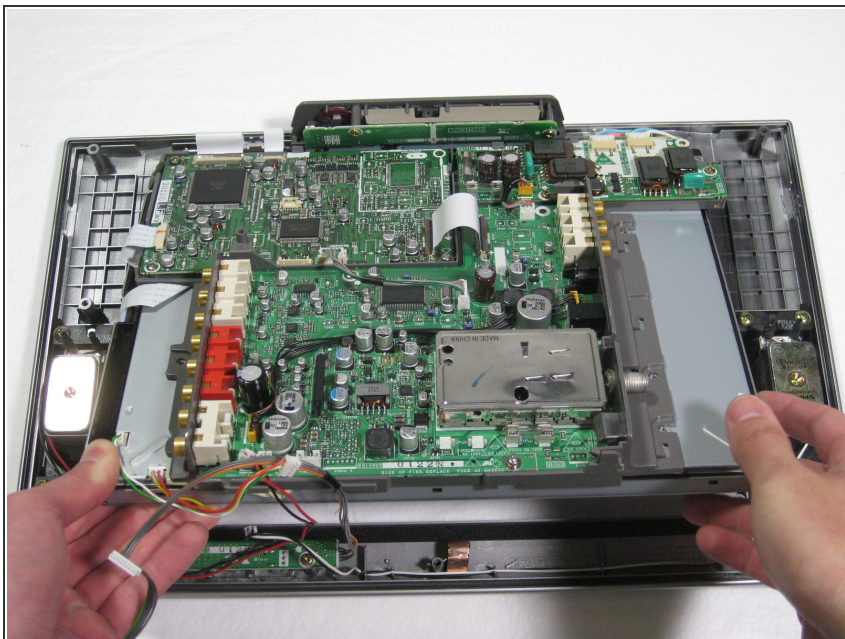



- Lift the circuit board/LCD block from the case by lifting the near side of the circuit board and sliding it under the button frame.

## Step 10 — Power Button

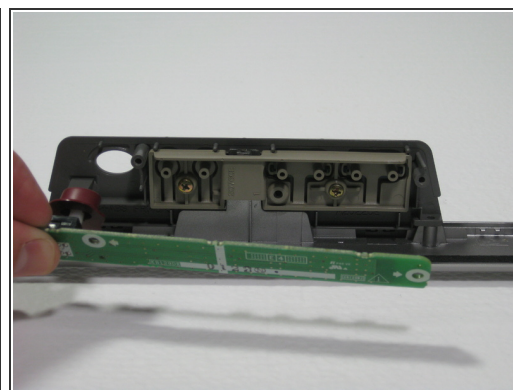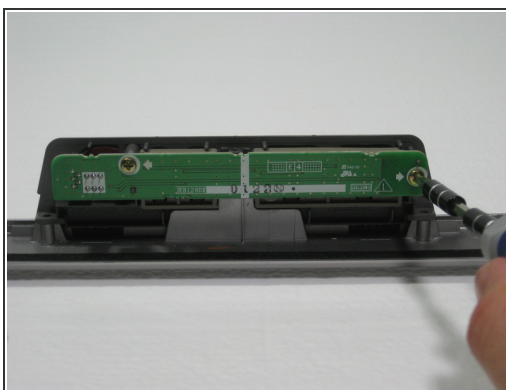

- Remove the two 6mm Phillips screws.
- Pull the board toward you, giving you access to the power button.

## Step 11 — Top Buttons

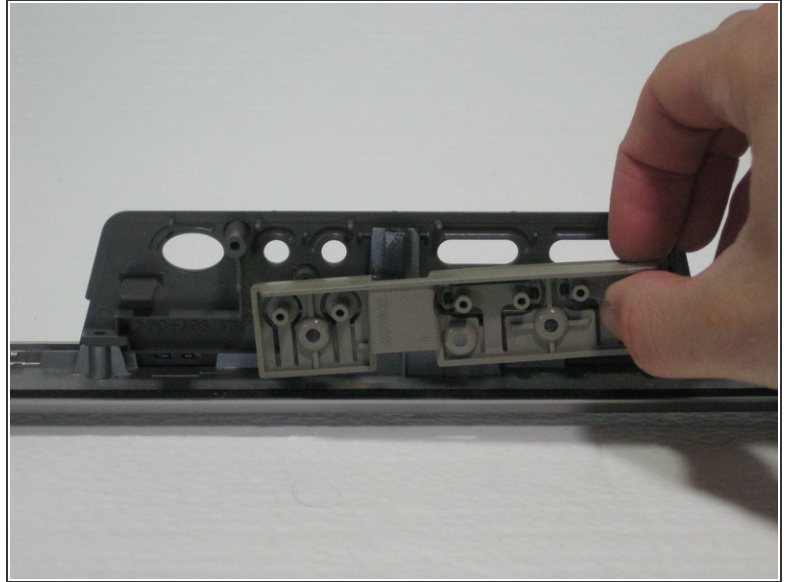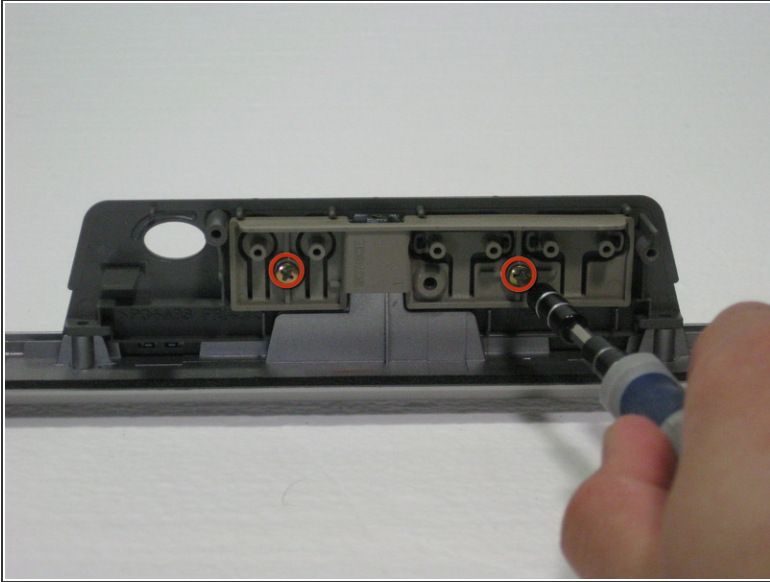

- Unscrew the two 4mm Phillips screws.
- Lift the buttons off the front case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 04:22:07 PM.